



36' Tension Tent®

Erection Instructions

- 1) Lay out tent by locating stake plates as per diagram. It is critical that stake plates are placed exactly as per diagram or sidecurtains may not fit properly.
- 2) Plates should be arranged that the raised lip of the plate with hole faces the middle of the tent or where the center pole will be located.
- 3) Drive stakes flush with plates.
- 4) Lay tent on ground and attach to plates via the stainless steel Quiklinks.
- 5) Insert side poles one at a time.
- 6) Insert center pole into tent.
- 7) Secure bottoms of side poles by staking tabernacles down according to the diagram.
- 8) Adjust Center Pole Height (if necessary) by placing spacers underneath the pole if the ground or site is not level.
- 9) If TensionTent has a middle (ie 36x51, or 36x66) as 15'5" to length for each middle.

