


30'x30' Celebration

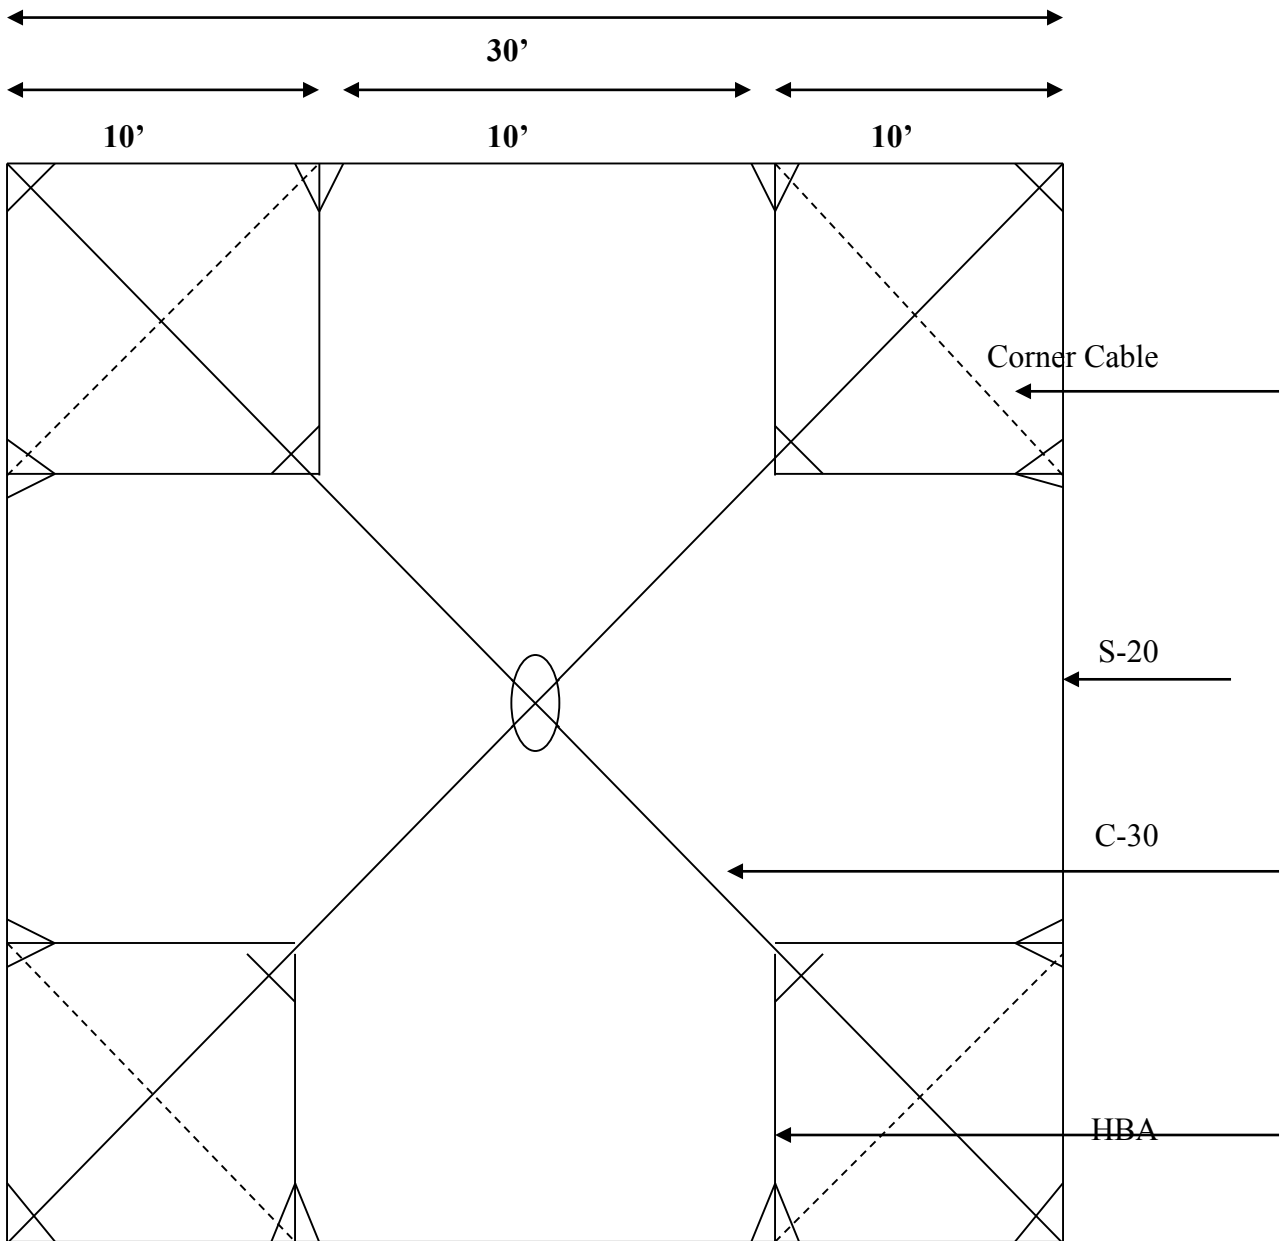

10' Spacing, Braces every upright, Pitch = 9', Eave Height= 7'

NOT TO SCALE



30'x30' Celebration Erection Instructions

Step 1. Inventory all components (All pipe is labeled for easy identification) and layout your frame for erection.

Step 2. Assemble S-20's to corner & side assemblies inserting pins from outside pointing in. Allow loop to hang on bottom. Frame should be a perfect square.

Step 3. On one side, insert (2) C-30's onto the corner assemblies; slide the HBA onto C-30's before pinning the pipe to the fitting.

Step 4. Insert the four way hub and pin onto the C-30's.

Step 5. Insert the last (2) C-30's onto the corner assembly, sliding on the HBA onto C-30's before pinning.

Step 6. Insert C-30's onto 4-way hub and pin. Frame should be in the shape of a pyramid.

Step 7. Pin the HBA's onto the C-30's.

Step 8. Insert the hip brace pipe onto the HBA's and pin them. Insert HBA onto the side assemblies and pin.

Step 9. Attach your corner cables from side assembly to side assembly and pin. Frame is completely put together by this step.

Step 10. Celebration: Pull corners of tent top over frame. Catenary Celebration: in high winds, pin strap in corners of top through bottom of corner fitting to hold on frame while lifting.

Step 11. Lift one long side of tent and insert the uprights onto the fittings and pin. Catenary Celebration: Simply pull out pin when lifting and insert leg and re-pin strap.

Step 12. Lift opposite side and insert the uprights onto the fittings.

Step 13. Pin all uprights.

Step 14. Celebration: Fasten all buckles on inside of tent to frame. Pull buckles evenly until top is tight on frame. Catenary Celebration: Connect ratchets to D-Rings at bottom of each Catenary.

Step 15. Celebration: Insert and tighten eye into the corners and long side where there is a grommet or cutout. Then attach ratchet. Close the velcro on the split corners.



Catenary Celebration: Connect ratchets to stakes on 4 corners; slide stakes through intermediate ratchets of remaining uprights.

Step 16. Attach Braces. One long and one short brace per corner and one long and short at the middle uprights on the 40' long side.

Step 17. Drive stakes until only 6" of stake is left protruding. Placement of stake per diagram. Secure tent to stakes with ratchets. Catenary Celebration: After tightening corners, then tighten intermediate ratchets until top is tight on frame.